 


# mistral

## Air Circulator Fan MACD1001

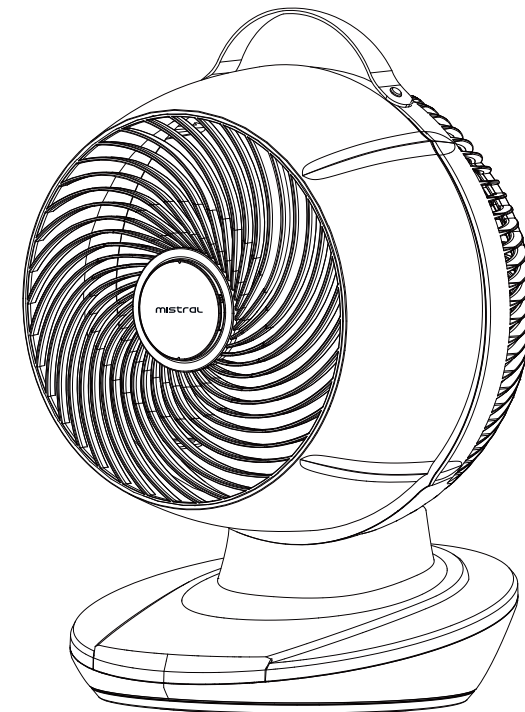

Please read this instruction manual thoroughly before operating and keep it for future reference

### Warranty & Customer Service

SCAN FOR



e-Warranty

**e-Warranty Registration at [www.khind.com.my/e-warranty.html](http://www.khind.com.my/e-warranty.html)**

**MAYER MALAYSIA SDN BHD**

Customer Service Hotline: 1800-88-0032

**Service Centre Operating Hours:**

8.30am – 6.00pm (Monday - Friday)

Closed on Saturday, Sunday and Public Holidays

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

### Waranti & Perkhidmatan Pelanggan

IMBAS UNTUK



E-Waranti

**Pendaftaran e-Waranti di [www.khind.com.my/e-warranty.html](http://www.khind.com.my/e-warranty.html)**

**MAYER MALAYSIA SDN BHD**

Hotline Perkhidmatan Pelanggan: 1800-88-0032

**Waktu Operasi Pusat Perkhidmatan:**

8.30am – 6.00pm (Isnin-Jumaat)

Ditutup pada hari Sabtu, Ahad dan Cuti Umum

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

## IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- Do not use force to tilt the fan casing up and down when not in operation. It will cause damage to the oscillation gear.
- Check if the power supply matches the specifications mentioned before use.
- Insert the plug to AC mains securely. Do not operate with wet hands or when the plug is wet.
- This appliance is intended for household use only. Not for commercial use.
- Use it in a dry place. Avoid excessive heat, humidity and water.
- Handle fan blade with care during cleaning.
- Do not operate this appliance without a fan blade, broken or bend fan blade.
- Do not insert finger or other objects into the fan grill.
- Do not use outdoors or windows. Rain drops may cause electrical hazards.
- If any malfunction or abnormality, please stop using the appliance and immediately send it to a nearby Mistral Service Centre.
- Do not pull, lift or carry the appliance by its AC Adapter cord. In order to avoid damages to the AC adaptor cord, do not pull the cord around sharp corners and edges.

 
## CLEANING AND MAINTENANCE

- Unplug the product before cleaning. After the motor is cooled down, use a cloth to clean the grille and product surface.
- Do not use wet cloth or pour water on the product when cleaning. Excess water may enter the motor and cause electric shock.
- Do not use any corrosive cleaning solution to clean the appliance.
- Do not use the appliance with metal scouring pads as it may scratch the surface.
- Do not immerse the appliance in water or other liquids.

## PRODUCT TECHNICAL PARAMETERS

| MODEL    | RATED VOLTAGE     | RATED POWER | AIR VOLUME                | MAX AIR FLOW |
|----------|-------------------|-------------|---------------------------|--------------|
| MACD1001 | 220-240V~ 50-60Hz | 26W         | 11.34 m <sup>3</sup> /min | 4.2 m/s      |

## INTRODUCTION OF PARTS

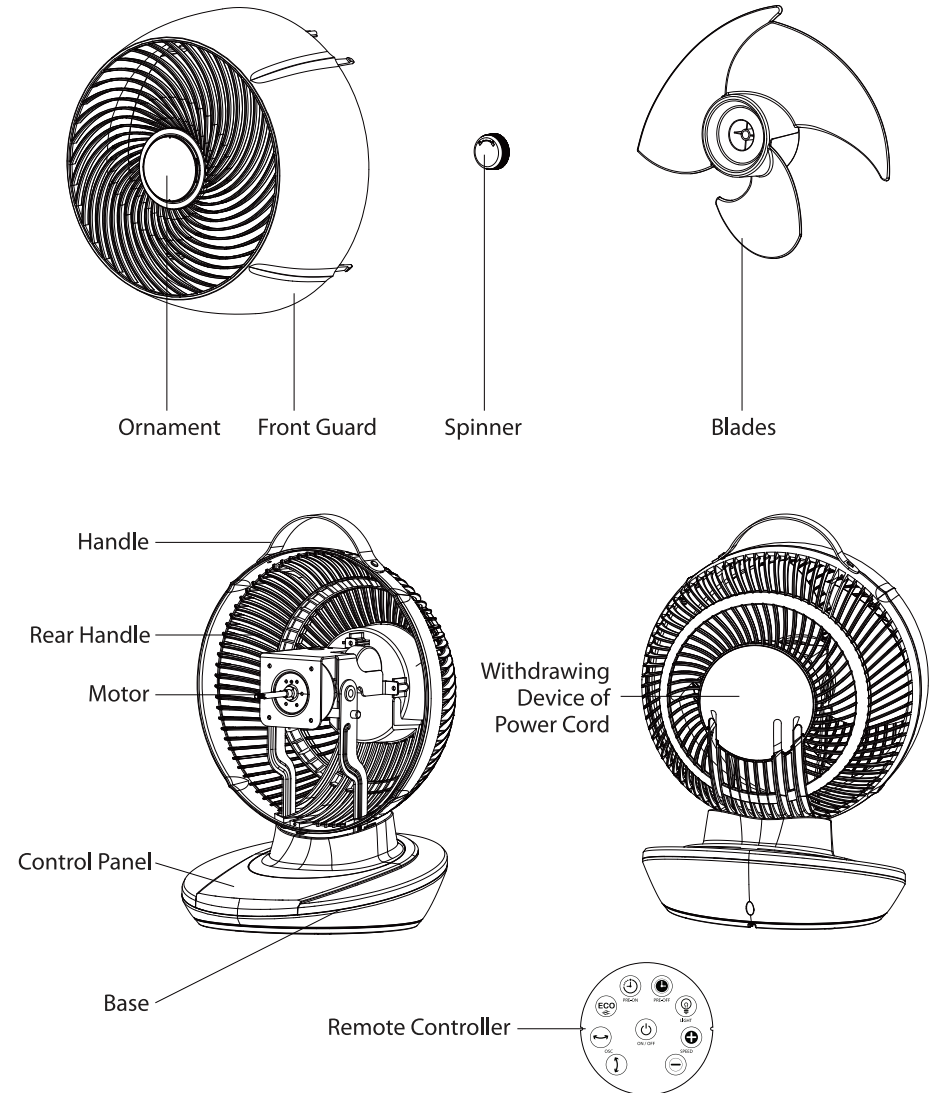


## CONTROLS AND OPERATIONS


### Remote Control

- The remote control can be operated within 3.5 - 5 meter radius.
- Light Mode : by default the Light is ON, you may press at the button to OFF the light.
- You may refer to other functions of the Remote control as per below :

 
### Control Panel

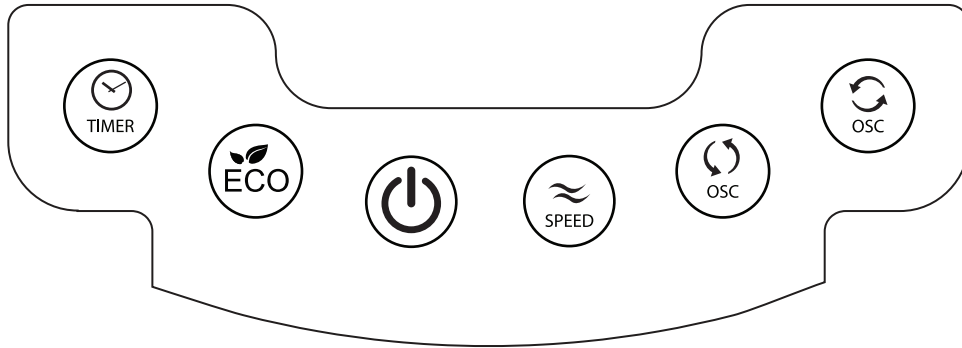



### ON/OFF Button

- Press this button  to switch on the fan, the appliance makes a “Beep Beep” sound and it enters the standby state.


 
### Speed Button

- When the fan is powered on, press the SPEED button  on the control panel/ remote controller to adjust the wind speed. There are 12 speed levels for selection.


### Oscillation Button

- This button provides you the choice of fixed of directions up-down  & left-right  airflow movement. Press it again if want to cancel oscillation.

### Timer Button

- When the fan is standby state, press the TIMER button  to set up automatic shut up time. The fan can be set to shut up automatically in 1-12 hours.
- When the fan is running state, press the TIMER button  to set up automatic shut down time. The fan can be set to shut down automatically in - 1-12hours.

### ECO Button

- This button  provides you the choice of normal mode & ECO mode. Starting up default is normal speed.
- When the appliance is at ECO mode, the speed button cannot be selected and the speed function will change according to the room temperature. Refer to the below table.

| Temperature | Mode   | Speed Level |
|-------------|--------|-------------|
| ≤23°C       | Normal | 2           |
| 23°C ~ 25°C | Normal | 4           |
| 25°C ~ 27°C | Normal | 6           |
| 27°C ~ 29°C | Normal | 8           |
| 29°C ~ 31°C | Normal | 9           |
| 31°C ~ 33°C | Normal | 10          |
| ≥33°C       | Normal | 12          |