 


mistral

9" High Velocity Fan MHV900FST

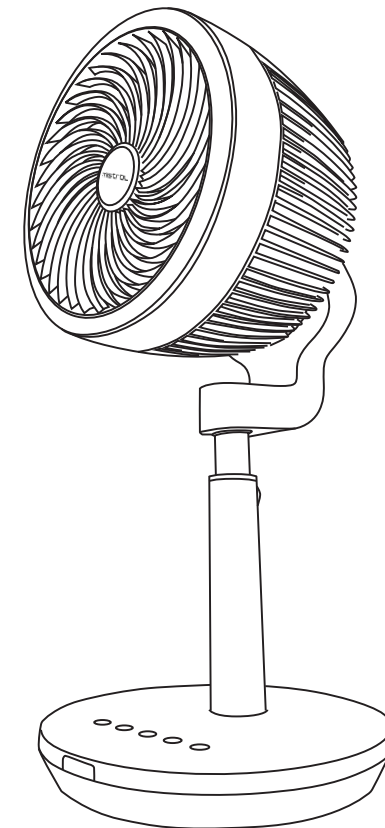

Please read this instruction manual thoroughly before operating and keep it for future reference

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at <https://khindonline.com/login>

MAYER MALAYSIA SDN BHD

Customer Service Hotline: 1800-88-0032

Service Centre Operating Hours:

8.30am – 6.00pm (Monday - Friday)

Closed on Saturday, Sunday and Public Holidays

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

Waranti & Perkhidmatan Pelanggan

IMBAS UNTUK



E-Waranti

Pendaftaran e-Waranti di <https://khindonline.com/login>

MAYER MALAYSIA SDN BHD

Hotline Perkhidmatan Pelanggan: 1800-88-0032

Waktu Operasi Pusat Perkhidmatan:

8.30am – 6.00pm (Isnin-Jumaat)

Ditutup pada hari Sabtu, Ahad dan Cuti Umum

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Do not use appliance for other than intended purpose.
- Insert plug into a ground socket of 220-240V - 50/60Hz.
- Do not cover the appliance.
- The appliance must be upright at all times, do not leave it facing down or lying by the side.
- Unplug from outlet when not in use and before cleaning. Always unplug the power cable when you don't use it.
- Do not place the appliance against a wall or directly next to other appliances. Leave at least 30cm of free space around the appliance for proper oscillation.
- Do not touch the inside of the appliance when it is operating. Do not insert fingers, pencils, or other objects into the appliance.
- Make sure there are no curtains, table cloths, clothing, curtains, hair, etc. located next to the appliance. They could be sucked into the opening of the fan, which can lead to damage or injury.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use at outdoors or on wet surfaces.
- Do not use the appliance near bath, shower or swimming pool.
- Do not expose the appliance to direct sunlight.
- Do not use this fan with another semi-conductors speed controller.
- Do not use the fan near flammable or explosive gases.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and / or injury.
- Ensure that the fan is switched off from the supply mains before removing the guard.

CLEANING AND MAINTENANCE

- Always turn off and unplug the fan before cleaning.
- This appliance cannot be immersed in water to clean. You may take out the fan guard and fan blade to clean, but the other parts (inclusive of motor parts) should not come in contact with water as this is hazardous.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry, place.

Cleaning fan guard and fan blade

- Unscrew the screw at screw hole for front guard, and remove the front guard.
- Loosen and unscrew to take out the nut, then take out the fan blade.
- Unscrew the 3 screws on the back front guard, and take out the motor cover.
- Unscrew the remaining screws to take out the back guard.
- After cleaning the fan guards and fan blade, ensure that they are thoroughly dried before putting and assembling them back into the fan.



Note:

- Ensure that the appliance is properly assembled before turning on to operate it again.

PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MHV900FST	220-240V~ 50-60Hz	30W	21.65 m ³ /min	243.5 m/min

INTRODUCTION OF PARTS

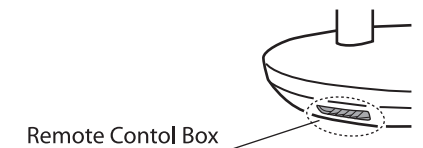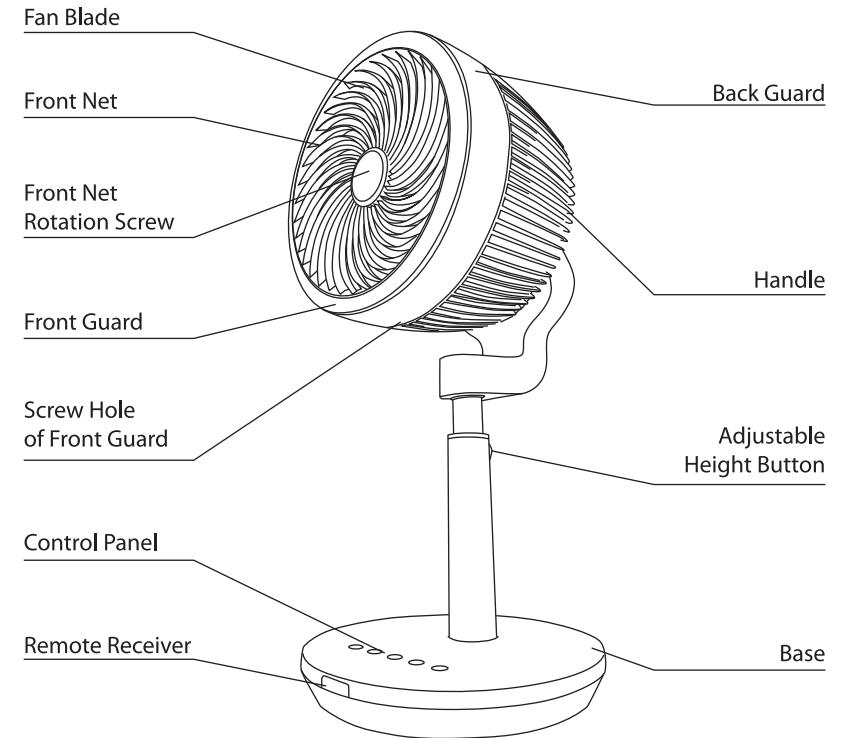


CONTROLS AND OPERATIONS

 Control Panel

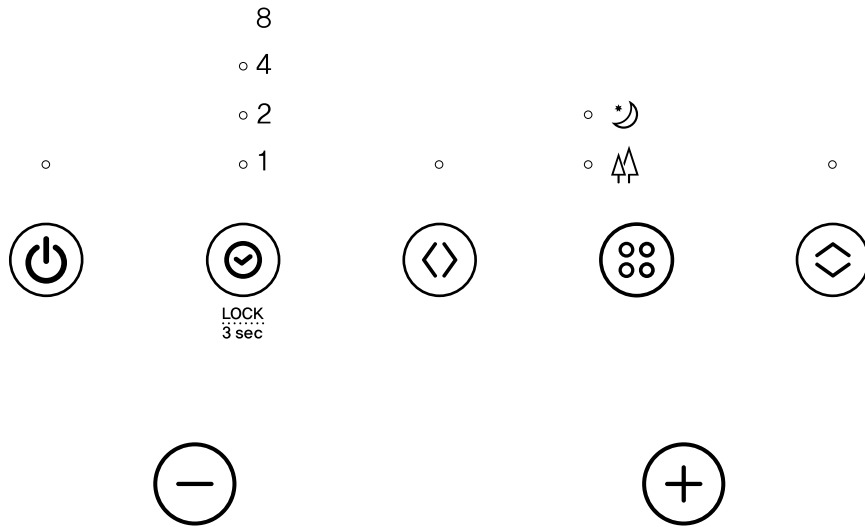

Remote Control

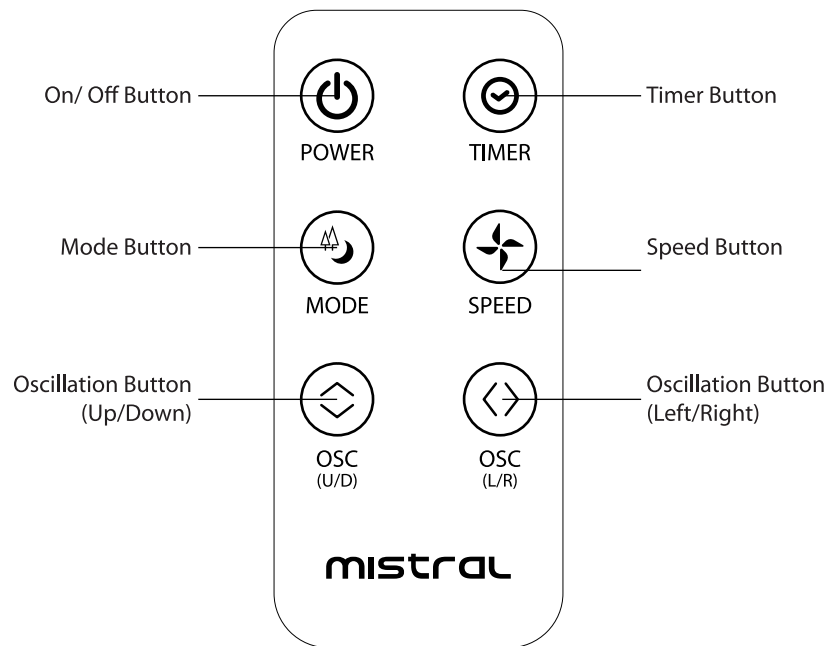

Operation:

Power:

- Connect the mains plug to a grounded socket.
- Press the power button to start.

Speed & Fan Mode:

- 8 speeds can be adjusted by pressing the button to increase and to decrease.
- Press button to switch to "Natural" or "Sleep" mode.

Oscillation:

- Press button to turn on or off the left and right auto-oscillation.
- Press button to turn on or off the up and down auto-oscillation.

Timer:

- Press the button to choose the timer with 1 / 2 / 4 / 8 hours to turn off the appliance.
- When this button is pressed for 3 seconds during operation, the child lock function starts, only the button and button to be operated. Press for 3 seconds again can cancel child lock function.

Lighting:

- When the machine is operating but all keys are not operated within 15s, the brightness of the indicator will dim to 50% brightness.
- Press any key to remove this function, and the corresponding indicator light will be brighten back.

Remote Controller:

- The remote control can be used within a distance of up to 5 meters.

Front Net Rotation:

The front net rotation enables the wind from the fan to be more well-distributed and caters to a wider exposure as well.

- When the appliance is not operating, turn the front net rotation screw counterclockwise to loosen the front net. Please do not remove the front cover.
- Power on to operate the appliance and set the speed at between speed 5 - 8, and the front net will start to rotate.

To stop rotation mode:

- Turn the front net clockwise and tighten it to lock the front net.
- Do not touch the front net or turn the front net rotation screw while operating the front net rotation. This may cause injury, please be careful.
- Depending on your environment, the front net may not rotate at a constant speed.