 


# mistral

## High Velocity Fan MHV912R

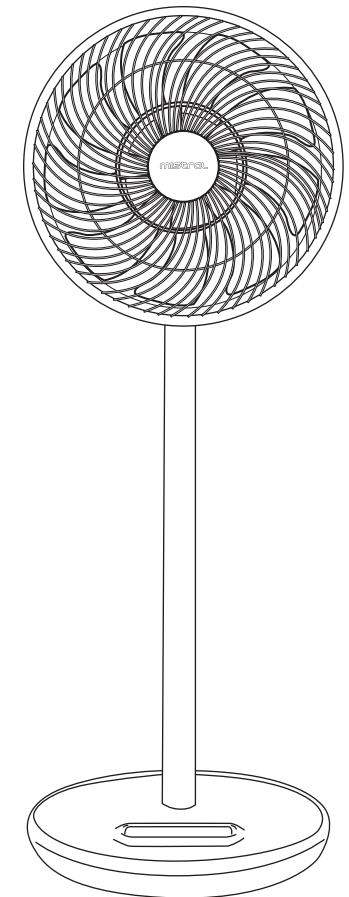

Please read this instruction manual thoroughly before operating and keep it for future reference

### Warranty & Customer Service | Waranti & Khidmat Pelanggan

SCAN FOR  
Imbas di sini untuk



e-Warranty  
e-Waranti

e-Warranty Registration at <https://khindonline.com/login>

Pendaftaran e-Waranti di <https://khindonline.com/login>

#### MAYER MALAYSIA SDN BHD

(Formerly known as Khind Alliances Sdn. Bhd.)

Customer Service Hotline: 1800-88-0032

#### Service Centre Operating Hours:


8.30am – 6.00pm (Monday - Friday)

Closed on Saturday, Sunday and Public Holidays

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

## IMPORTANT SAFETY INSTRUCTIONS

1. Before cleaning the fan, please turn off the switch and pull out the plug.
2. Take out the front cover by pulling it out, as per the picture shown. Turn the knob out then take the blade out and wash. After cleaning, ensure the blade is dry and then install it back.

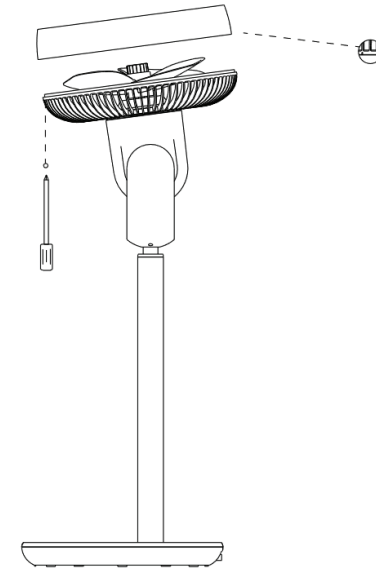

## IMPORTANT SAFETY INSTRUCTIONS



1. Check the household voltage to ensure it matches the appliance's rated specification. Be sure to plug into a 220-240V~, 50Hz/60Hz outlet.
2. Put in the plug, you can hear "Bi, Bi", and the LED display show the room temperature, then press the "⏻", product starts at speed one with display.
3. SPEED:  
Press the "⬆️" increase speed, Press the "⬇️" reduce speed, when you chose a speed, the number will show in the display window, after few second, the speed number will be fixed.  
MODE:  
4. Press the "👶", you can choose baby mode. The LED shows 0.  
Press the "🌀", you can choose turbo mode. The LED shows 5.  
Press the "🌀", the fan operates on turbo mode. Meanwhile, the oscillation of up and down, left and right also works. After 20mins, the fan recovers to natural mode.  
TIMER  
5. Product has be setting on 1H/2H/3H/4H/5H/6H/7H/8H/9H/10H/11H/12H.  
Press the "🕒", When you press timer, the LED display window will show the timer hours number, and the Indicator light will on.  
OSC:  
6. (1) Press the "↕️", the product will oscillate up and down by automatic.  
(2) Press the "↔️", the product will oscillate left and right by automatic.  
REMOTE CONTROL  
7. The remote control has the same function as the control panel.  
All the Indicator light and LED display will brightness by half after 15S, and if operation again,  
8. brightness will recover.  
Please pull the adapter out if do not use for long time.  
9.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read all instruction carefully and keep this manual for future reference.
2. Do not place the appliance on hot surfaces.
3. To avoid electric shock, do not place the cord, the plug or the appliance in water or any other liquids.
4. Close supervision is necessary when the appliance is used by or placed near the children.
5. Unplug the plug outlet when not in use or before cleaning.
6. Do not operate the appliance if the power cord or plug is damaged, or if there is a product malfunction. Return the appliance to our service centre for examination.
7. Do not let the cord hang over the edge of the table or place on any hot surfaces. Do not place the appliance on a rough or cloth covered surface.
8. Please check the power cord & the plug first to see if they are in good condition, and check the appliance to see if there is any a crack or damages. If there is, please contact the customer service for assistance.
9. When shifting the fan or when not in use, please switch off the power and unplug the plug.
10. Do not use the fan at places with high humidity, temperature higher than 40°C or at dusty areas.
11. Do not insert fingers or any other objects into the fan during operation.
12. Please do not blow directly towards elders, children or patients for a long period of time.
13. Do not spray any chemical agents, such as insecticides into the fan, so as to prevent any damages to the plastic material.
14. This appliance is for household use only. Do not use at outdoors or for any commercial or industrial purpose.
15. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. Always disconnect the main power, before any user maintenance.
19. If the power cord is damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
20. Please ensure that the fan is switched off from the supply main before removing the guard.

## IMPORTANT SAFETY INSTRUCTIONS

21. Do not operate the fan in the presence of explosive and/or flammable fumes.
22. Do not place the fan or any parts near an open flame or other heating appliance.
23. Do not hang or mount the fan on a wall or ceiling.
24. Do not operate if the fan is damaged.
25. This appliance is to be used with the power supply adapter provided inside the packaging.

## PRODUCT TECHNICAL PARAMETERS


MODEL	MHV912R
PRODUCT SIZE(LxWxH)	340x330x920mm
VOLTAGE	12Vdc
INPUT POWER/CURRENT	26W/1.2A

### DC Adapter:

INPUT	100-240V~, 50/60Hz, 1.2A
OUTPUT	12Vdc, 3.0A

2.

## INTRODUCTION OF PARTS

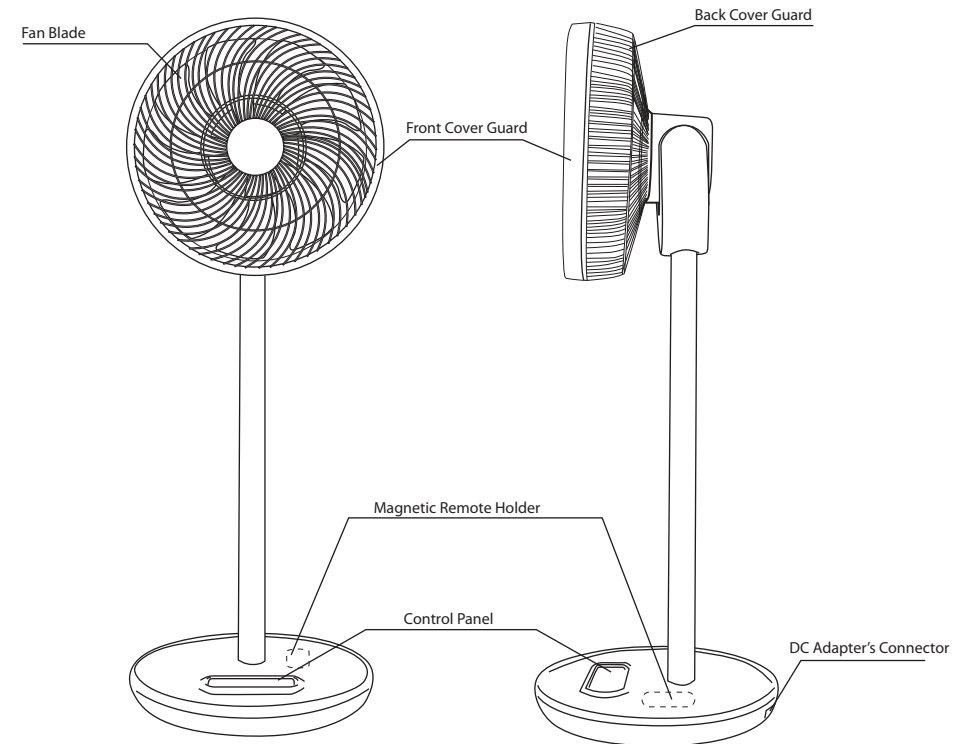

3.